



RKS

THERMAL RADIATORS

RKS4Hi	RKS4L
RKS6Hi	RKS6L
RKS8Hi	RKS8L
RKS10Hi	RKS10L
RKS12Hi	RKS12L
RKS14Hi	RKS14L


INSTALLATION INSTRUCTIONS AND USER GUIDE

1. - WARNING Please read these instructions before installing or using this appliance for the first time.

- The warranty of the heater will not cover any damage caused by non observance of any of these instructions.
- This guide must be kept and given to any new owner.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Should the heater be moved and reinstalled, it is essential that the work is carried out by a competent electrician.
- The use of these heaters is forbidden in any area where there is a presence of gases, explosives or inflammable objects.
- Neither the connecting cable nor any other object must come into contact with the hot unit.
- Check that the voltage shown on the rating plate on the heater is the same as the voltage of the supply to which connection is to be made.
- WARNING: In order to avoid overheating, do not cover the heater. Do not use this heater to dry clothes.
- The air outlet at the top of the thermal radiator and the air inlet at the bottom are provided to ensure the most efficient operation of the appliance. They also protect the heater from overheating; therefore, it is essential that at no time are they covered.
- This heater should be switched off at the isolating switch before any repair work is carried out. This action should also be taken during the times of the year when heat is not required.
- The thermal radiator should not be installed just below an electrical socket or in front of a socket outlet.
- The appliance must be installed in such a way that switches and other control devices cannot be touched by a person using a bath or shower.
- The installation must be carried out in accordance with the current electrical regulations.
- The heater is fitted with a flexible cable size 3 x 1.00 mm² for electrical connection. It may be used to connect the heater to the fixed wiring of the premises through a suitable connection box positioned adjacent to the heater. This appliance must be earthed.
- The supply circuit to the heater must incorporate a double pole isolating switch having a contact separation of at least 3 mm.
- If the flexible supply cord is damaged, it must be replaced by a repair workshop recognised by the manufacturer, in order to avoid hazard.
- All models are supplied with an electrical interrupt cut-out. This will switch off the heater if, for any reason, it overheats. Should the cut-out operate, turn the heater off and remove the cause for the overheating. The cut-out will be reset automatically.
- The presence in the air of particles of smoke, dust and other pollutants could, in time, discolour the walls and surfaces around the heater.
- **CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**


2. - INSTALLATION INSTRUCTIONS

- Open the package and check that it is the correct model and it is in good condition.
- To obtain optimum performances it is necessary to maintain a minimum clearance of 15 cm between the radiator and any inflammable material as furniture, curtains etc.
- The rest of clearances required to maintain are indicated on the following figure:

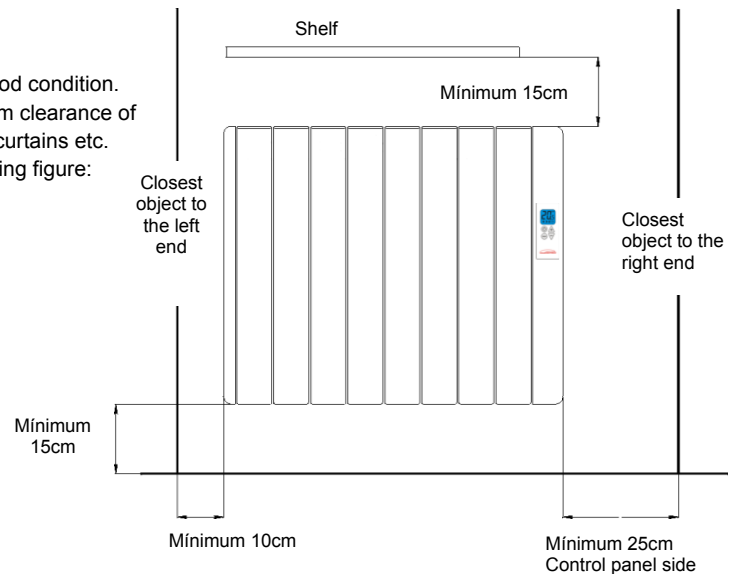

Position and fix the brackets at the correct distance from the floor. It is possible to use the radiator as measuring unit by positioning it on two polyester package elements and placing two supports above as indicated on the figure:

- The studs and screws to attach the supports are in the accessories bag.
- Hang the unit on the hooks of the brackets.
- By turning the screw the metallic square will go downwards, retaining the heater. Repeat this on the other bracket.

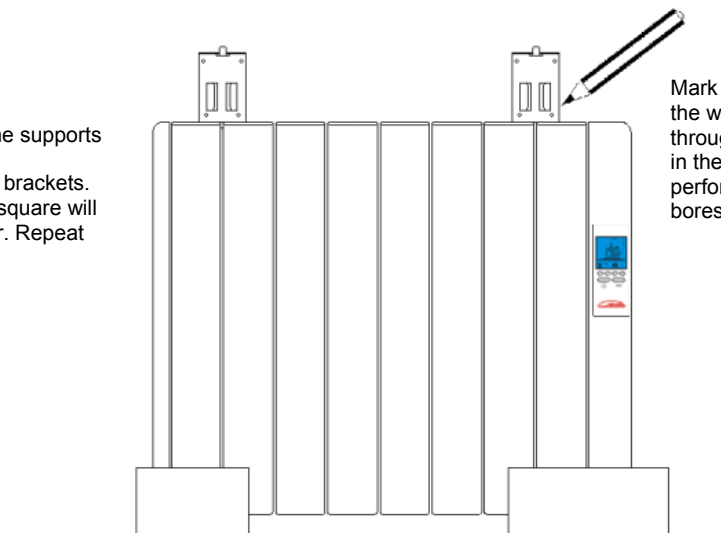

Mark the fixing points on the wall using a pencil through the two fixing holes in the square brackets and perform corresponding bores.

3. - USING THE THERMAL RADIATOR

MODELS RKSHi


ON/OFF key:

Push the button to switch on/off the heater. Also you may lock/unlock the keyboard by maintaining it for several seconds.


OPERATION MODE KEY:

Press the key to select operation mode:

- permanent COMFORT,
- permanent ECONOMICAL,
- permanent FROST PROTECTION
- AUTOMATIC modes.

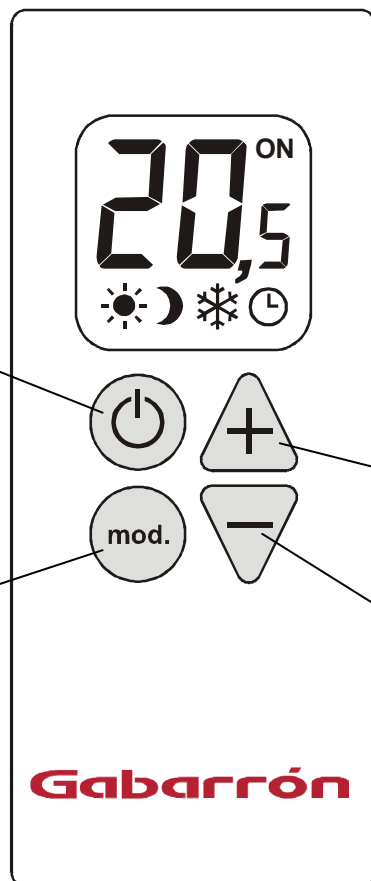

Main switch.
All models are equipped with one switch on the back surface allowing the heater disconnection.

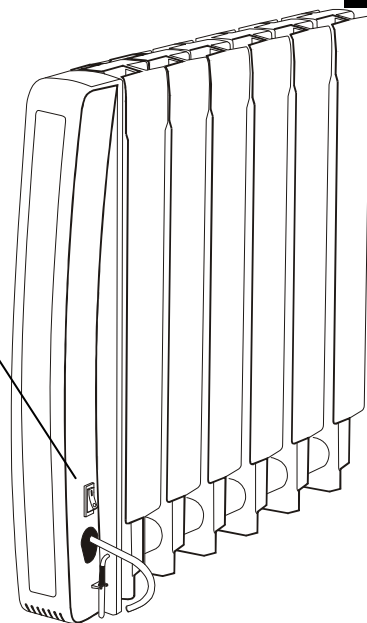

Key “+”:

Press the key to increase the COMFORT set point temperature.


Key “-”:

Press the key to decrease COMFORT set point temperature.

LCD DISPLAY: LCD display shows the information related to the heater operation.



Example of the heater permanent COMFORT mode, Set point temperature is 20.5°C, showing ON output condition.

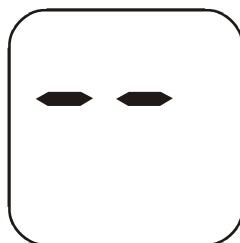

The heater is OFF.

ADJUSTMENT OF THE SET POINT TEMPERATURE

COMFORT set point temperature may be adjusted from 7°C to 30°C in 0.5°C steps.

Pressing the keys “+” or “-” the set point temperature is increased/reduced respectively. After three seconds if no other key is pushed the selected value is stored in memory.


The set point temperature in ECONOMIC mode is the COMFORT setting temperature reduced by 3.5°C.

The setting temperature in FROST-PROTECTION mode is 7°C and it is constant.

CORRECTION OF TEMPERATURE MEASURES

If there is a difference between temperature values on an external thermometer and the temperature displayed by the unit, it is possible to change the sensor settings in order to balance the difference (-5°C to +5°C, in 0.5°C steps).

In order to make changes hold the “mod.” key for more than five seconds and after that with buttons “+” or “-” increase or decrease the correction to 0.5°C respectively. Press the “mod.” key to store the correction in memory and proceed with the next setting.

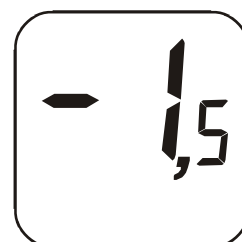

BLUE BACKLIGHT

Pressing any key the display will illuminate with a soft blue color. After certain time if no other keys are pushed the display backlight will turn off. It is also possible to adjust the display backlight time.

Hold the **"mod."** key during five seconds. After the correction, (if required) of the thermostat (see previous paragraph), a value from 0 to 90 seconds will be displayed. It may be modified in 15 seconds steps by **"+"** and **"–"** keys. If 0 value is selected, the display backlight will be off permanently. To store, press the **"mod."**key.

OPERATION MODES

By the **"mod."** key different functions or operation modes may be selected.




PERMANENT COMFORT mode.
Push the key **"+"** or **"–"** if it is required to modify comfort set point temperature.



PERMANENT ECONOMICAL mode. The set point temperature is reduced by 3.5°C.



PERMANENT FROST-PROTECTION mode. The set point temperature is 7°C and it is constant.

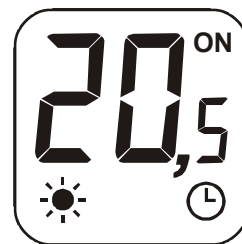



AUTOMATIC mode. In this mode programs from the input command cable (pilot wire) are performed.

KEYBOARD LOCK

In every operation mode it is possible to lock the keyboard by holding the **"ON/OFF"** key for more than 7 seconds.

When the keyboard is locked, if any button is pressed, the display will show **"Lo"** message and the unit will not respond.

To unlock the keyboard press the **"ON/OFF"** button for more than 7 seconds.

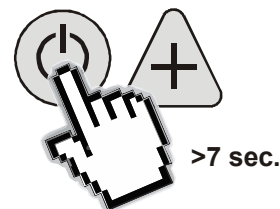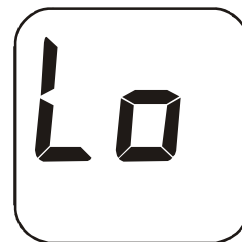

OPERATION WITH A PILOT WIRE PROGRAMMER.

It is possible to control the heater operation from a remote pilot wire programmer in AUTOMATIC mode. Pilot wire programmer orders for OFF and FROST PROTECTION are prior and independent from the operation mode selected in the heater.

OPERATION WITH A PROGRAMMER WITH POWER LINE CARRIER OR A LOAD-CONTROLLER WITH POWER LINE CARRIER.

In AUTOMATIC mode, it is possible to control the heater operation from a programmer with PLC (Power Line Carrier) or from a load-controller with PLC.

TO ASSOCIATE the heater, switch the PLC programmer or the PLC load-controller to the "association" mode (see corresponding manual).

Press the **"mod."** button for more than five seconds and after that press the **"mod."** button twice, the display will show **"CP"**,



Keep the **"mod."** button pressed. The message **"CP"** will start blinking. Release the **"mod."** button and press it again.

The display will show **"En"**. To store, press the **"mod."**key.

TO DISASSOCIATE the heater press the **"mod."** button for more than five seconds and after that press the **"mod."** button twice, the display will show **"CP"**. Keep the **"mod."** button pressed for 60 seconds until the display will show **"An"**. To store, press the **"mod."**key.

MODELS RKSL**CONNECT / DISCONNECT**

Main switch. All the models are equipped with the switch on the back surface for general heater disconnection. After a long-term disconnection it is necessary to reset the unit system time.

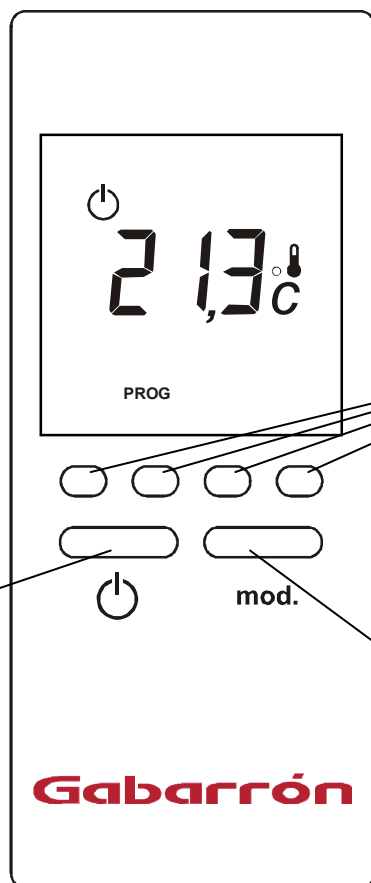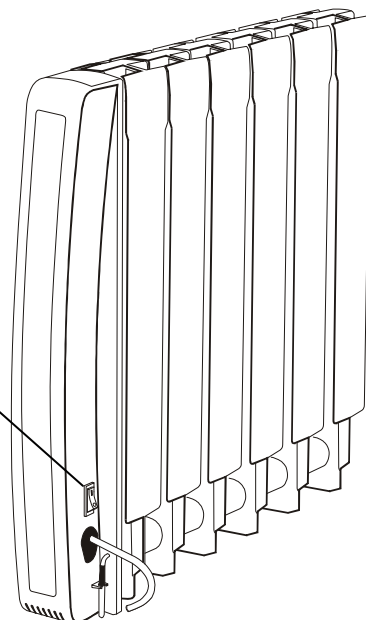

These four keys perform different operations depending on the message of the LCD display. Press two central buttons at a time for several seconds to lock/unlock the keyboard.

ON/OFF key:
Press the key to switch from OFF to OPERATION

Operation mode key:

Press the key to select different operation modes or to set the system time.


Time Settings

To perform correct programming it is necessary to set the system time.

To set the system time the unit should be in OFF position, with a symbol on the display.




Press the “**mod.**” key. Week days indication will start blinking.

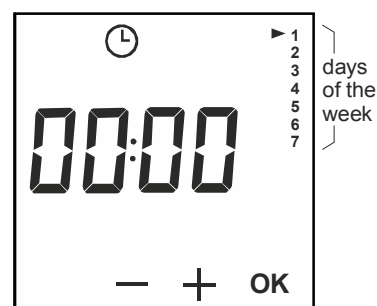

With “**+**” or “**-**” keys select present day and press “**OK**” to store. Proceed to time settings.

 
Set the hour with “**+**” or “**-**” keys and press “**OK**” to store. Repeat the operation to set minutes.



Press the “**ON/OFF**” key to exit.

ON/OFF

The heater may operate only in one of two conditions; ON or OFF.

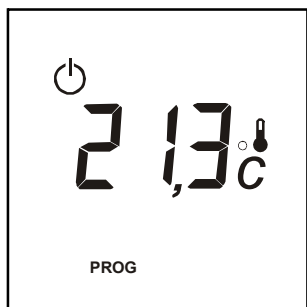OFF:

When the unit is in OFF, symbol is displayed together with premises temperature value.




To switch on the unit to ON mode press the key:

Last operation mode before the unit had been switched off will be displayed. Press the same key to switch off the unit and pass to OFF.

Apply preferably this form to switch off the unit instead of the main switch in order to avoid setting the system time constantly.

**ON:**

Different operation modes may be applied. To switch from one mode to another press the “mod.” key after no less than two seconds between each change.

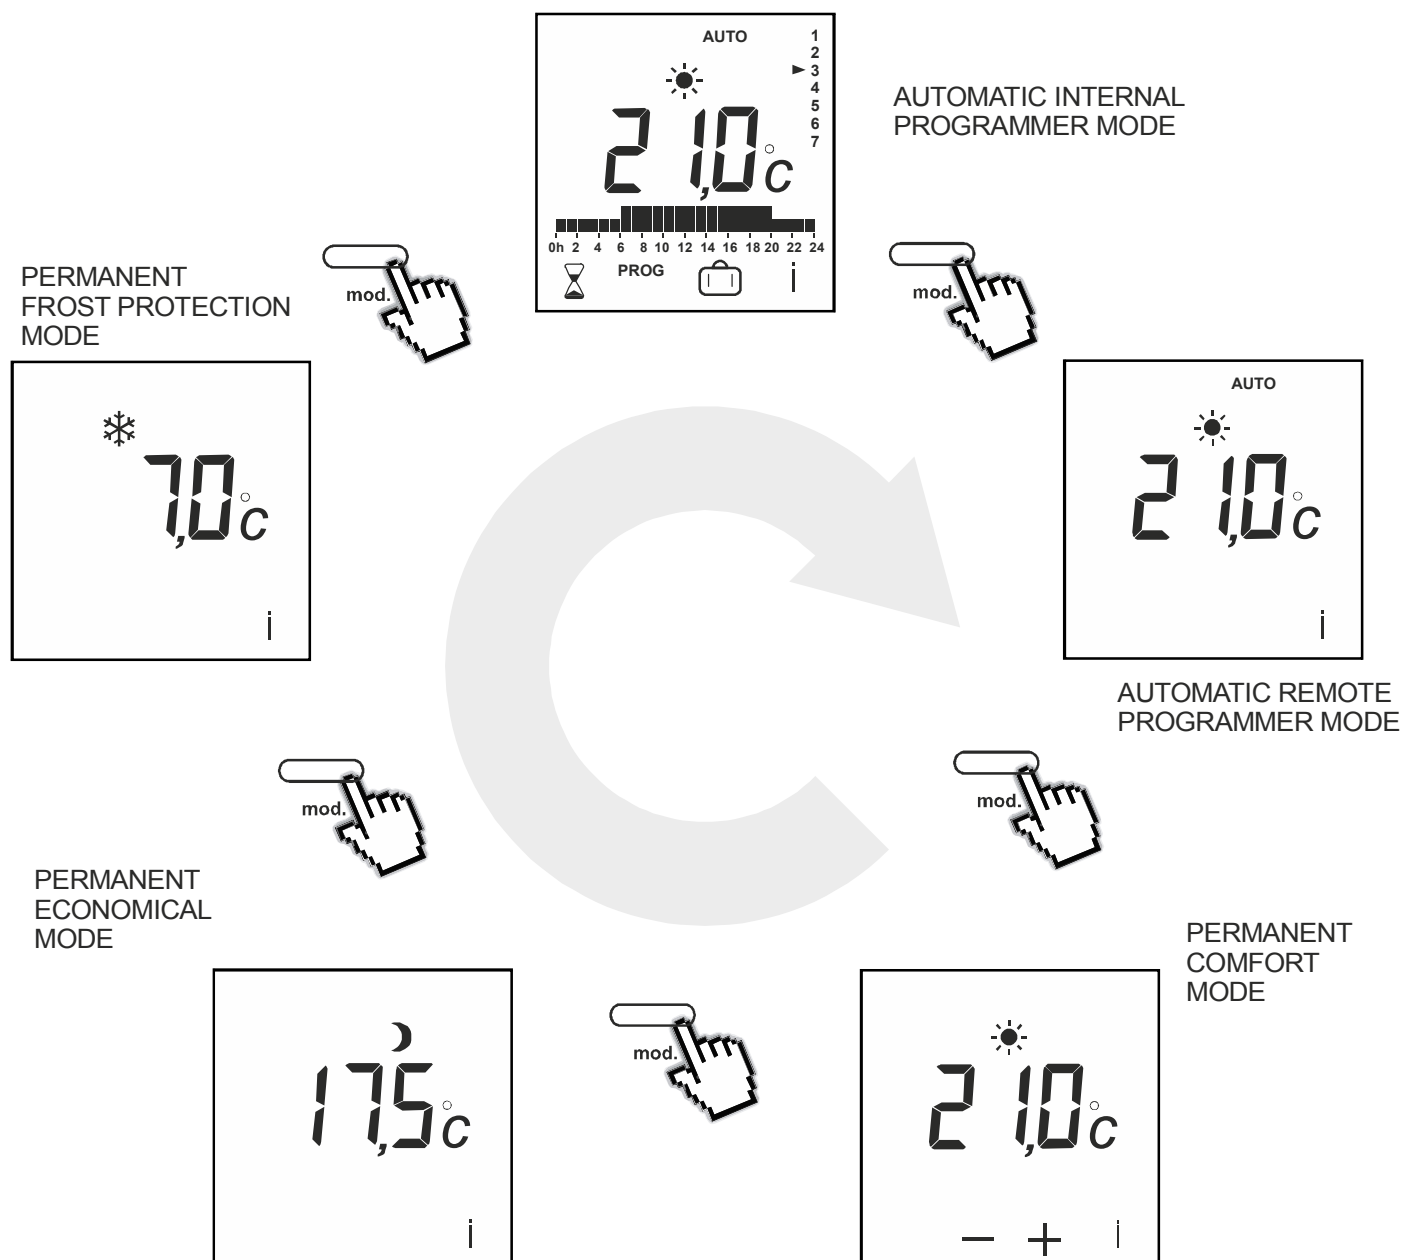


PERMANENT COMFORT MODE

In permanent comfort mode the unit maintains constantly the set point temperature. It is possible to modify COMFORT set point temperature in 0,5°C steps by pressing the keys “+” or “-” .
Temperature range is from 5 to 30°C.

When the heater consumes power, ON message is displayed.

Pressing the “i” will momentarily display the premises temperature.

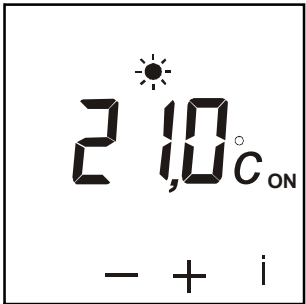


PERMANENT ECONOMICAL MODE

In economical mode the unit maintains all the time the ECONOMICAL set point temperature.

Originally the economical set point temperature is the comfort set point temperature reduced by 3.5°C.

See menu 1 of CONFIGURATION paragraph to modify the reduction or even to select economic set point temperature.


Pressing the “i” key displays momentarily the premises temperature.

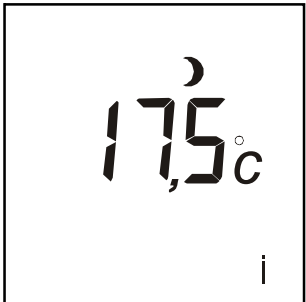

PERMANENT FROST PROTECTION MODE

In permanent frost protection mode the unit will operate when the premises temperature decreases lower than 7°C.

In this mode pressing the “i” key displays momentarily the premises temperature.

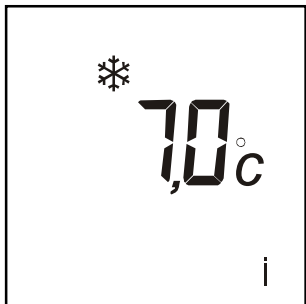


AUTOMATIC INTERNAL PROGRAMMER MODE

In this mode the unit performs commands of the internal programmer.


Programming


By default the program “Comfort fro 8h to 22h is applied for all days of the week.

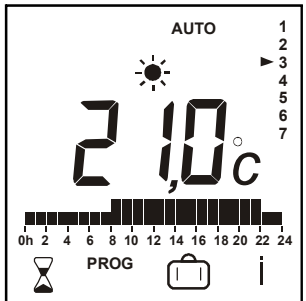


To modify the program press the “PROG” key in this mode or in OFF mode.


Select the temperature level for the first time interval of the day 1 by pressing one of the following keys:

Pressing  displays two segments indicating COMFORT temperature.

Pressing  display one segment indicating ECONOMICAL temperature.


Pressing  does not display any segment, indicating FROST PROTECTION temperature.

After programming all 24 intervals for the DAY 1, press “OK” to pass to the DAY 2 of the week and repeat the procedure.

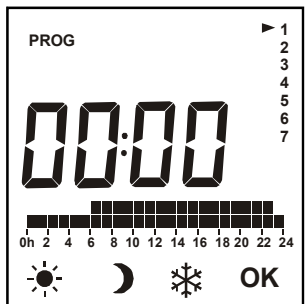


Fast Programming

To copy the complete program from one day to another hold the “OK” key for 3 seconds.

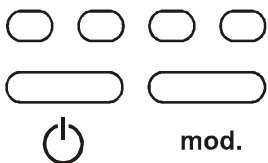

PROG KEY

Press the key to modify the program

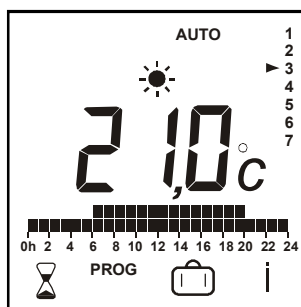INFO KEY


Press the key to see the premises temperature or set point temperature, according to configurations of MENU 5

SAND GLASS KEY

Press the key to adjust the specified temperature for certain determined time.


By keys “+” or “-” adjust the set point temperature and store by pressing the “OK”.

Adjust the time required by keys “+” or “-” and press “OK” to store.

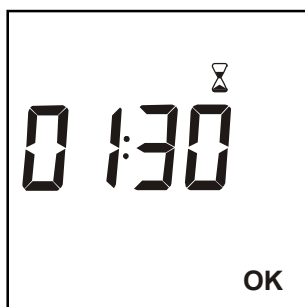ABSENCE KEY

Press the key to switch on the Frost Protection mode from 1 day to 365 days.


Adjust the amount of absence days by keys “+” or “-”, and store with OK key. To disconnect the absence mode press again the “OK” key.

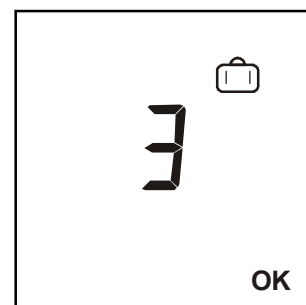

To go back to the previous settings press again the “OK” key.

AUTOMATIC REMOTE PROGRAMMER MODE

In this mode the unit follows commands from the remote control desk or remote programmer. If there aren't any, the unit operates in permanent COMFORT mode.

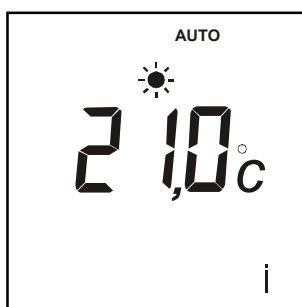**KEYBOARD LOCK**

In every operation mode it is possible to lock the keyboard pressing central “+” and “-” keys for several seconds.



With the keyboard locked pressing any key displays **bloc** message and the unit will not respond. With the keyboard locked the unit may receive commands from the IR remote control.

To unlock the keyboard press simultaneously central keys “+” and “-” for several seconds.

CONFIGURATION

It is possible to configure various parameters of the unit.

In OFF mode press for 10 seconds “ON/OFF” key to enter the first configuration menu. It is necessary to pass through five menus to exit the configuration. The Menu number is displayed above in the right part of the display.

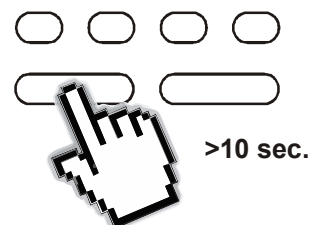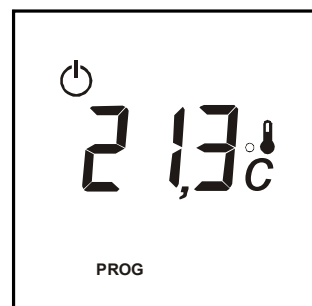


Menu 1: Adjusting the ECO set point temperature.

By default the Economic set point temperature value is equal to comfort temperature value reduced by 3,5°C.


The reduction value may be modified from 0 a 10°C in 0,5°C steps.

For this purpose modify the value with the keys “+” / “-” and press “OK” to store and pass to the next setting.

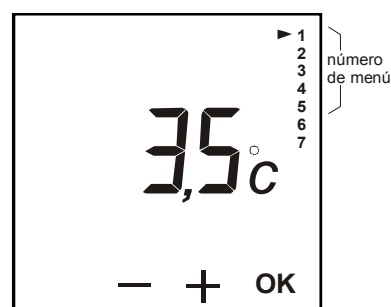

ECO set point temperature value may be stored independently from the CONFORT temperature value.


To authorize ECO value modification press and hold the “+” key until it displays the message “-----” and store pressing “OK”.

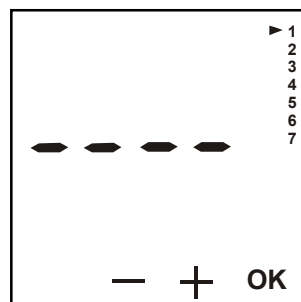

In such a way when selecting the permanent economical mode it

will be possible to assign any temperature with “+” or “-” key displayed at selection of permanent economical mode.


Selection range will start from 4.5°C to the comfort set point temperature.

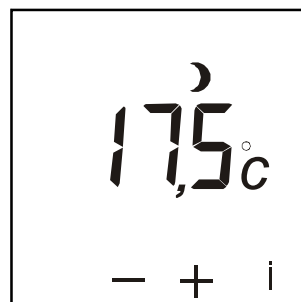

Menu 2: Correction of temperature measures.

If there is a difference between an external thermometer indication and the temperature displayed by the unit, in menu 2 it is possible to influence on the sensor in order to balance the difference. (-5°C to +5°C,) in 0,1°C steps.

To modify press the keys “+” or “-”, after press the “OK” key and proceed with the next setting.

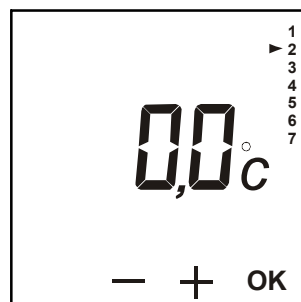


Menu 3: Configuration of CPL

This menu allows associating the unit to the remote CPL programmer connected to the same power grid.

In menu 3 press the “+” for 5 seconds. CPL message will start blinking.
Switch the CPL programmer, remote control desk to the “association” mode (see corresponding manual). Press shortly the “+” key. “EnrE” message displays on the screen and then “CPL” message confirming the association.


Press “OK” key to proceed with the following setting.

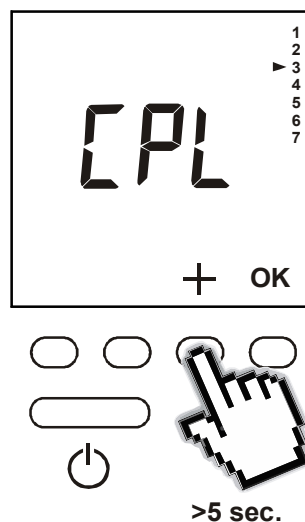

Menu 4: Backlight time settings

Adjustable backlight is available from 0 to 225 seconds in 15 seconds steps (90 seconds by default).

To modify press “+” or “-”, keys, then press the “OK” to store and proceed with the next setting.

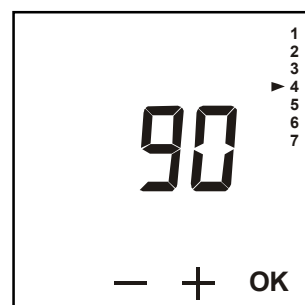


Menu 5: Selection of temperature display in AUTO operation mode.

1 = Permanent display of the premises temperature.

0 = Permanent display of the set point temperature.

To modify press “+” or “-”, keys, then press the “OK” to store and exit the configuration mode.

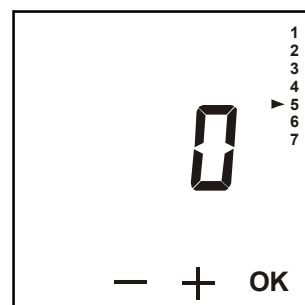

4. - CLEANING AND MAINTENANCE

The radiators do not require any special maintenance providing thermal comfort during large periods. Clean dust with a dry, soft cloth only when the unit is disconnected and cold.

Do not use solvents or abrasive products for cleaning.

After the heating season disconnect the radiator with the switch located on the back surface of the radiator.

This thermal radiator has been manufactured under an assured quality system using environment friendly processes.

Please take the heaters to a clean point once their useful life is finished, in order to recycle their materials in the right way.

5. - TROUBLESHOOTING


- **The thermal radiator does not heat.** Check the heater or the air inlets are not covered.
- **The room does not reach the required temperature.** Check the selected temperature is in accordance with the desired temperature. Maybe the room needs more heating power.
- **“-9.9°C” ó “99.9°C” message is displayed** Sensor wrong connection. Contact the after sale service.
- **“d2” or “d3” message is displayed** Sensor wrong connection. Contact the after sale service .
- **“dEF” message is displayed** CPL connection trouble. Contact the after sale service.
- **Time settings are lost** There was electric supply shortage or the unit had been disconnected by the main switch
- **The keyboard does not respond** If the **bloc** message is displayed, the thermal radiator keyboard is locked. Hold two central keys for several seconds to unlock the keyboard.

6. - SPECIFICATIONS


<i>Models (Hi / L)</i>	RKS4	RKS6	RKS8	RKS10	RKS12	RKS14
Elements	4	6	8	10	12	14
Length (cm)	41.5	57.5	73.5	89.5	105.5	121.5
Height (cm)	58					
Width (cm)	10 + 2.5 séparation de la paroi					
Weight (kg)	8	11	14	17	20	23
Power (W)	500	750	1000	1250	1600	2000
Isolation	CLASS II					
Voltage	220-240 V~					

7. - WIRING

MODÈLES RKSHI

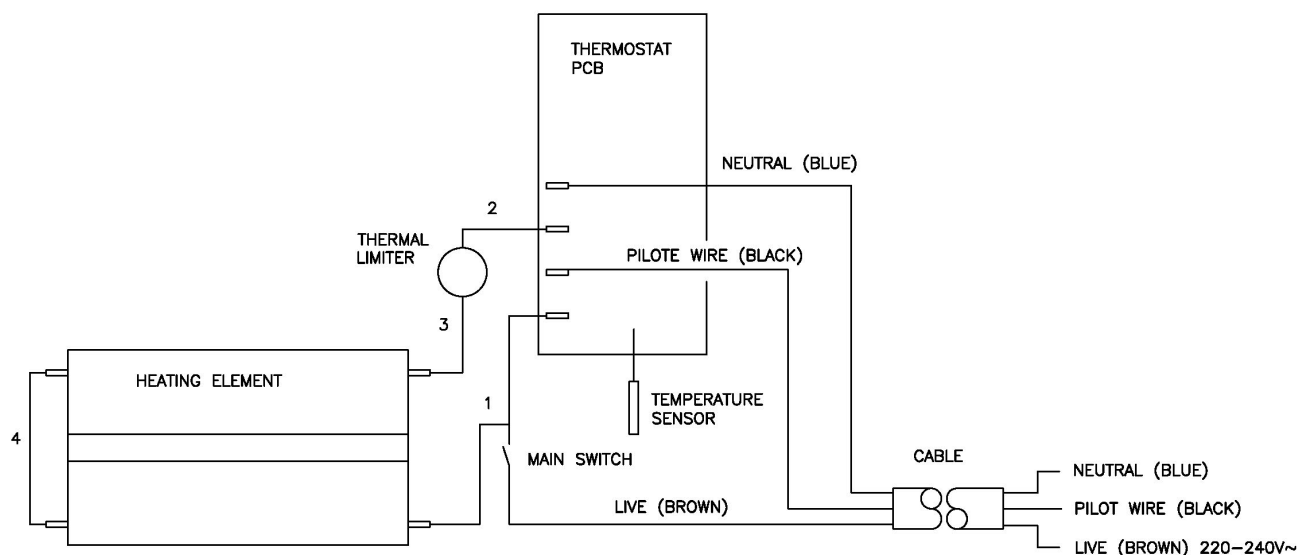

MODÈLES RKSL

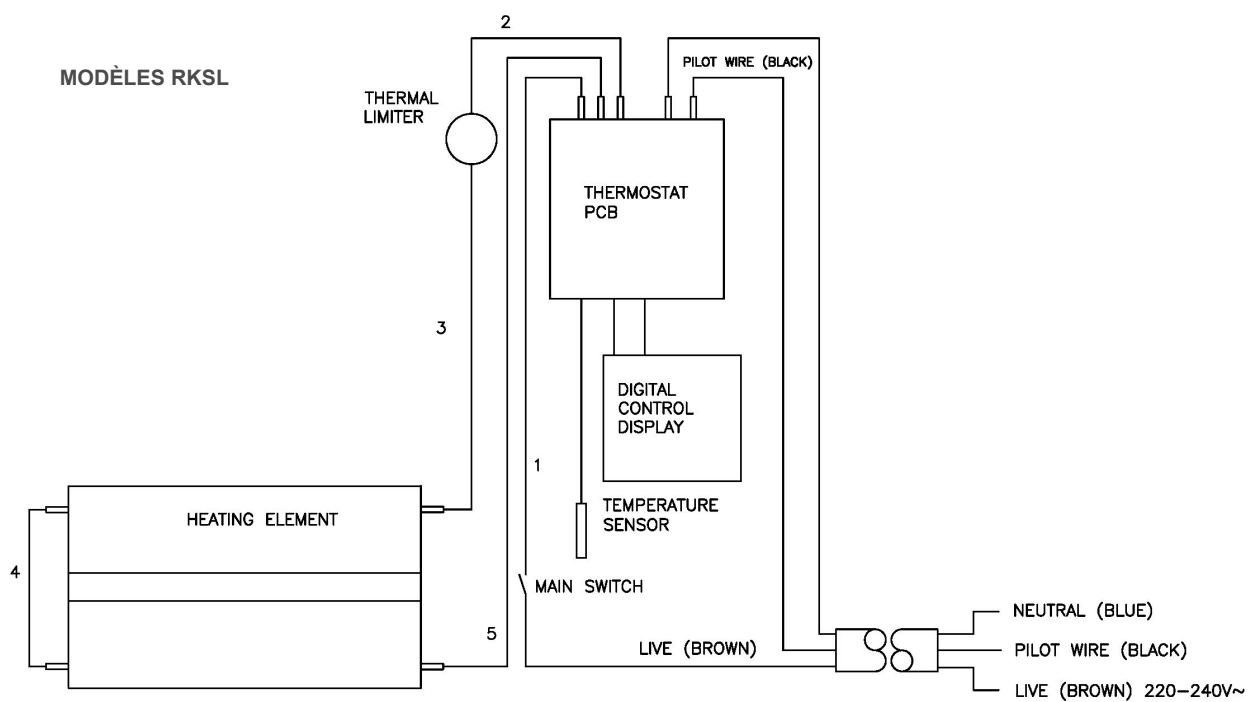

Connect the black wire marked "Fil Pilote" to the signal wire when available. Do not connect this wire to any EARTH lead.

Connect "L" and "N" wires to a fix wall socket or to an appropriate plug WITHOUT EARTH.



EN: **WARNING:** In order to avoid overheating do not cover the heater.

EN



The symbol on the product or in its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. These instructions are only valid in the EU member states.



ELNUR S.A.

Travesía de Villa Esther, 11
28110, Algete - Madrid

Elnur UK - Unit 1
Brownstreet North,
Leigh, WN7 1BU
01942 6770119

www.elnur.es
www.elnur-global.com
www.elnur.co.uk



ISO 9001



ISO 14001

As part of the policy of continuous product improvement the manufacturer reserves the right to alter specifications without notice.
Dans le cadre de la politique d'amélioration continue, Elnur s.a. se réserve le droit de réaliser des modifications techniques sans préavis.