

INSTALLATION INSTRUCTIONS AND USER GUIDE



CONVECTOR HEATER

PHM075 AND PHM075T	RATING 750 W	230 – 240 V~
PHM125 AND PHM125T	RATING 1250 W	230 – 240 V~
PHM150 AND PHM150T	RATING 1500 W	230 – 240 V~
PHM200 AND PHM200T	RATING 2000 W	230 – 240 V~

Please read these instructions before installing or
using this appliance for the first time

Panel Convactor Heaters


1.- IMPORTANT INFORMATION

- The warranty of the panel heater will not cover any damage caused by non observance of any of these instructions.
 - This Guide must be kept and given to any new owner.
 - Before connecting this appliance to any power supply, the wall fixing bracket located below has to be detached.
 - Check that the voltage shown on the rating plate on the heater is the same as the voltage of the supply to which connection is to be made.
 - Should the heater be moved and reinstalled it is essential that the work is carried out by a competent electrician.
 - The use of panel heaters is forbidden in any area where there is a presence of gases, explosives or inflammable objects.
 - Do not use this heater to dry clothes.
 - Neither the connecting cable nor any other object must come into contact with the hot unit.
 - Do not cover this heater at any time.
 - The surfaces of this heater can be hot, so young children should not be left unsupervised in the vicinity of the heater.
 - The air outlet grill at the top of the heater cabinet and the air inlet at the bottom of the heater are provided to ensure the most efficient operation of the appliance. They also protect the heater from overheating; therefore, it is essential that at no time are they covered.
 - This heater should be disconnected from the electricity supply before any repair work is carried out. This action should also be taken during the times of the year when heat is not required.
 - The panel heater should not be installed just below an electrical socket.
 - The appliance must be installed in such a way that switches and other control devices cannot be touched by a person using a bath or shower.
 - The installation must be carried out in accordance with the current electrical regulations.
 - The heater is fitted with a flexible cable size 3 x 1.00 mm² for electrical connection. It may be used to connect the heater to the fixed wiring of the premises through a suitable connection box positioned adjacent to the panel heater.
 - This appliance must be connected to the supply by fixed wiring. The supply circuit to the heater must incorporate a double pole isolating switch having a contact separation of at least 3 mm.
 - If the flexible power cable for this unit is damaged, it may only be replaced by a repair workshop recognised by the manufacturer, as special tools are necessary.
 - This appliance must be earthed.
 - Before carrying out any work inside the appliance, the panel heater must be disconnected from the electricity supply.
 - The presence in the air of particles of smoke, dust and other pollutants could, in time, discolour the walls and surfaces around the panel heater.
 - Please complete the enclosed warranty card and return it to the manufacturer to enable registration to take place.
- All models are supplied with an electrical interrupt cut-out. This will switch off the heater if, for any reason, it overheats. Should the cut-out operate, turn the heater off and remove the cause for the overheating. The cut-out will be reset automatically.

2. – INSTALLATION INSTRUCTIONS

- When positioning the heater for installation it is important that a minimum clearance of 50 cm must be allowed between the heater and any combustible materials, such as furniture, curtains etc, to ensure the best heating results.


- Open the carton at the indicated side. The screws are in the accessories bag. Turn the carton upside down to allow the heater to stand. Check that it is the correct model and that it is in good condition.
- Fix the two square brackets to the back of the heater by using the two small screws (see Fig. 1).

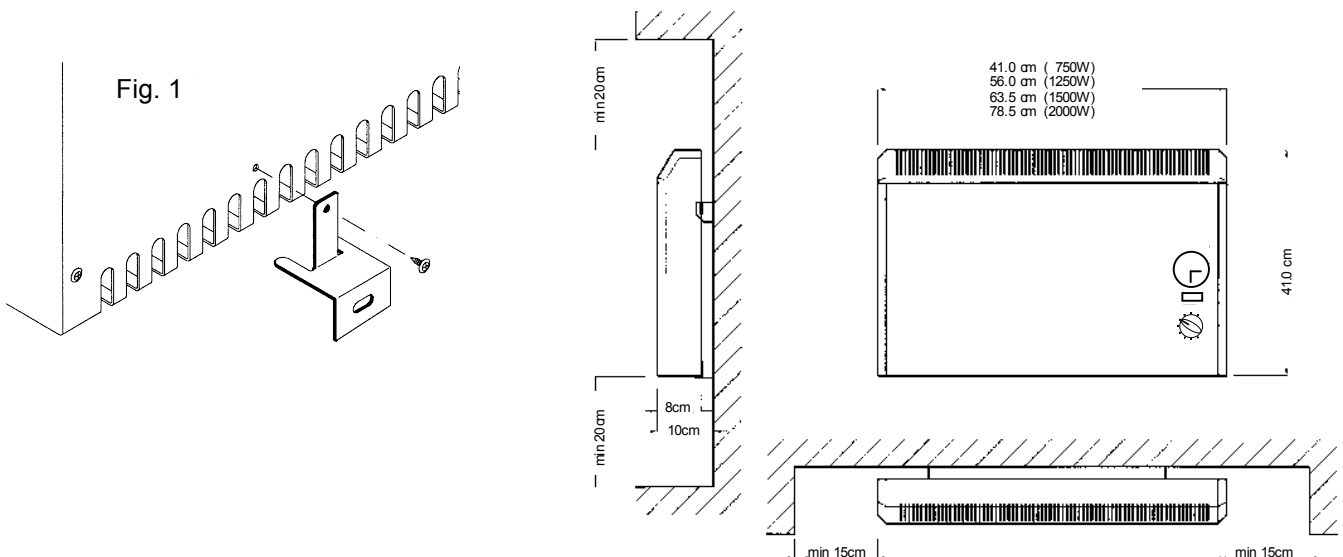

- Position and fix the top bracket at the correct distance from the floor (see Fig. 2) and hang the unit on the hooks of the top bracket. Mark the fixing points on the wall using a pencil. Use the heater fixing holes as a template and mark the wall through the two fixing holes in the square brackets. Fix the heater to the wall.

Panel Convector Heaters

3. – USING DE PANEL HEATER

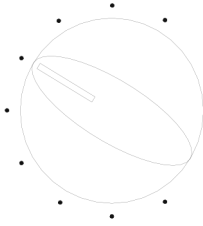


Switch on the heater by setting the switch marked **I-O** to "I". The off position is marked "O".

When the heater is generating heat the neon indicator on the switch will be illuminated.

The heater is fitted with an adjustable thermostat, which enables room temperature to be controlled by adjusting the setting accordingly. Turn the thermostat control to the maximum (fully clockwise) to heat the room rapidly. When the desired temperature has been reached, turn the thermostat control slowly to the left (anti-clockwise) until the luminous indicator switches off. By leaving in this position, the heater will automatically maintain the selected temperature.

TIMER MODELS

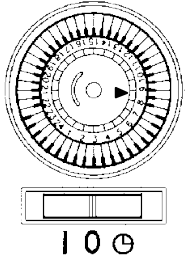

If the slide switch marked **I-O** is set to the position marked "I" the heater will be always on, under the control of the thermostat and the switch at the side.


If the slide switch marked **I-O** is set to the position marked "O" the heater will be in the off position.

If the slide switch marked **I-O** is set to the position marked "⌚" the heater will operate automatically. Set the timer by rotating the dial clockwise until the correct time is indicated opposite the datum mark. Pull the appropriate segments out to set the desired programme. This programme will repeat itself every day. The timer may be set to give as many "on" periods of any length as may be required.


4. – CLEANING AND MAINTENANCE

Clean and dust with a dry, soft cloth only when the unit is disconnected and cold. Do not use solvents or abrasive products for cleaning.

5. - WIRING

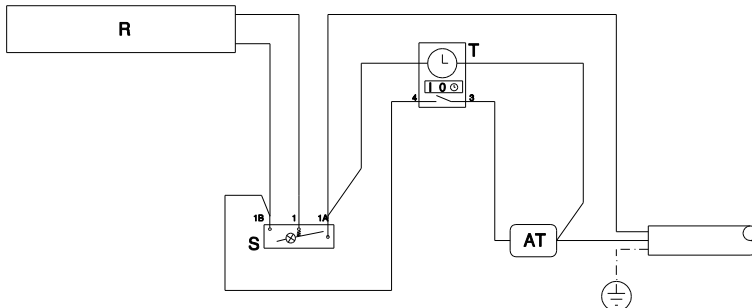

R: Heating Element with Safety Cut Out
S: Switch
AT: Ambient Thermostat
T: Timer

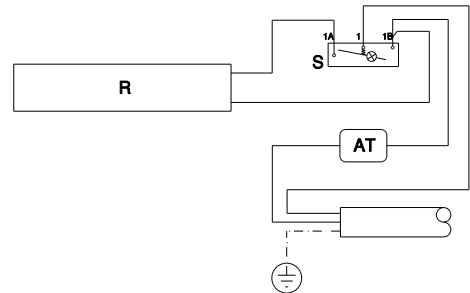

Brown: Live
Blue: Neutral
Green and Yellow: Earth



WARNING: In order to avoid overheating do not cover the heater.



The symbol on the product or in its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. These instructions are only valid in the EU member states.



ELNUR UK Ltd.
Unit 1, Brown Street North
Leigh, Lancashire
WN7 1BU
www.elnur.co.uk

Customer Service Department:
Telephone +44(0)1942 670119
technical@elnur.co.uk

Manufactured by:
ELNUR, S.A.
Madrid, Spain
www.elnur-global.com
export@elnur-global.com

Management System International Certifications:



As a part of the policy of continuous product improvement Elnur reserves the right to alter specifications without notice.

INSTALLATION INSTRUCTIONS AND USER GUIDE WEB VERSION